

2-A **2-B** **2-C** **2-D**

START BOOSTY

TEST
↓
...1
↓
...2
↓
etc...

START **STOP** **+ / -**

BOOSTER **STOP** **5"**

NO **YES** **YES** **YES**

BOOSTER OVERHEATING

"SURCHAUFFE BOOSTER"
"BOOSTER OVERHEATING"
"BOOSTER UEBERHITZE"
"RISCALDAMENT BOOSTER"
"SOBRECALENT. BOOSTER"
"SOBREAQ. BOOSTER"
"BOOSTER OVERVERHIT"
"OVEROPPVARM. BOOSTER"

STOP **10'** **START**

MOTOR OVERHEATING

"SURCHAUFFE MOTEURS"
"MOTORS OVERHEATING"
"MOTOREN UEBERHITZE"
"RISCALDAMENT MOTORI"
"SOBRECALENT. MOTORES"
"SOBREAQ. MOTORES"
"MOTOREN OVERVERHIT"
"OVEROPPVARM. MOTORER"

STOP **20'** **START**

LOW VACUUM DEFAULT

"FAIBLE DEPRESSION"
"LOW VACUUM DEFAULT"
"NIEDRIG LUFTRUCK"
"BASSA ASPIRAZIONE"
"DEPRESSION ESCASA"
"BAIKA DEPRESSAO"
"LAGE DRUK"
"LAVT LUFTRYKK"

8-E

2" **SAFETY** **2"**

SECURITE
SAFETY
SICHERHEIT
SICUREZZA
SEGURIDAD
BEVEILIGING
SIKKERHET

BOOSTER DEFAULT

"DEFAULT BOOSTER"
"BOOSTER DEFAULT"
"BOOSTER FEHLER"
"DEFETTO BOOSTER"
"FALLO DEL BOOSTER"
"FALHA BOOSTER"
"STORING BOOSTER"
"BOOSTER-FEIL"

5" **TEST** **...1** **...2** **etc...**

CLOGGING-UP + **CLOGGED FILTER BAG**

START **?** **9**

ALDES / www.aldes.com